



- 3** You can mount the assembled frame case to helmets, vehicles, and other gears by using the GoPro® accessories: Attachment Buckle and Thumb Screw (sold separately).

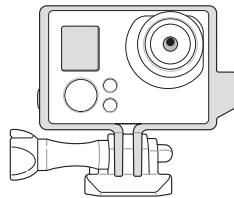


### Installing the Waterproof Housing

- 1** Using an index finger, press down and slide the buckle release button to slide the latch forward. While pressing down on the buckle release button with an index finger, use the thumb to open the buckle.

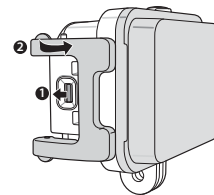


Standard Backdoor

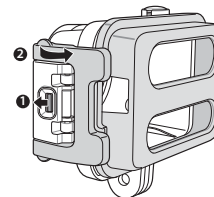


Skeleton Backdoor

- 2 Unhook the buckle from the housing to open the backdoor.

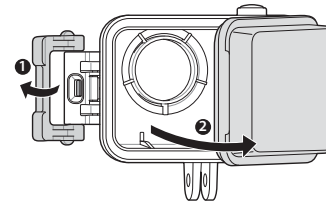


Standard Backdoor

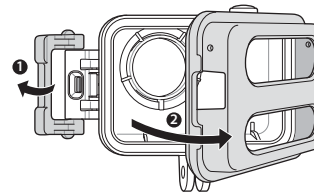


Skeleton Backdoor


- 3** Insert the camera into the waterproof housing.

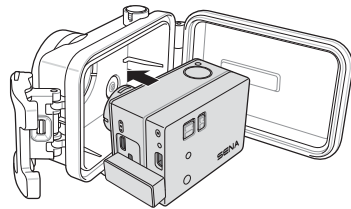

- 4** Close the backdoor and hook the buckle into it. Press down on the latch firmly until the latch clicks shut.

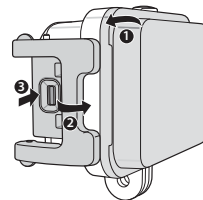

Standard Backdoor

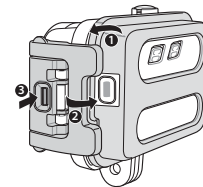


Skeleton Backdoor




- Before using the waterproof housing in a wet environment, ensure that it is completely sealed.
- Do not open the housing where it would be exposed to dust or sand, and be sure to remove any foreign objects from any part of the housing before closing the housing. Failure to observe these precautions could result in damage to the Bluetooth Audio Pack and the GoPro camera.

### Replacing Backdoor

- 1 Remove the standard backdoor from the waterproof housing.

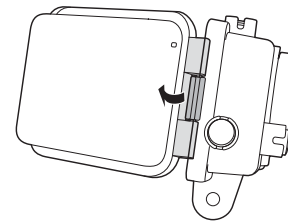

- 2** Fit the skeleton backdoor to the hinge of the waterproof housing.

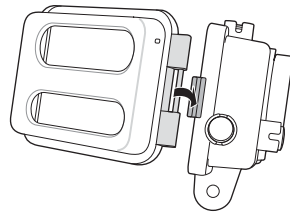


### Powering On

Push the Power Switch down to power on, then the LED will flash blue.

### Powering Off

Push the Power Switch upward to power off, then the LED will turn red and automatically be turned off shortly.

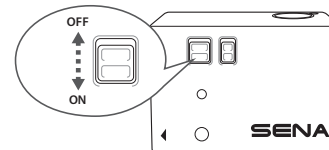

English